

# **User Manual**

## **Battery Energy Storage System**

**Soluna Lyra 5K Pack**

**A.1**



## **About this Specification**

---

This manual provides comprehensive instructions for installing the Soluna Lyra 5K Pack. It is imperative to thoroughly read this manual before attempting to install the product and to follow the instructions diligently throughout the installation process.

If you have any doubts about the requirements, recommendations, or safety procedures described in this manual, please contact Soluna immediately for advice and clarification.

The information contained in this manual is accurate at the time of publication. However, due to ongoing updates to product design and technical specifications, our company reserves the right to make changes at any time without prior notice. Additionally, the illustrations included in this manual are intended to aid in explaining system configuration concepts and installation instructions. The items depicted in the illustrations may differ from the actual items at the installation site.

SOLUNA (SHANGHAI) CO.,LTD reserves the copyright of this document.

|  |           |
|--|-----------|
| <b>1. Introduction.....</b>                            | <b>05</b> |
| <b>2. Features.....</b>                                | <b>06</b> |
| <b>3. Safety Precautions.....</b>                      | <b>07</b> |
| 3.1 Warning Sign.....                                  | 07        |
| 3.2 Safety Instructions.....                           | 08        |
| 3.2.1 Risks of Explosion.....                          | 08        |
| 3.2.2 Risks of fire .....                              | 08        |
| 3.2.3 Risks of electric shock.....                     | 08        |
| 3.2.4 Risks of damage to the battery pack.....         | 08        |
| 3.3 Battery handling guide.....                        | 09        |
| 3.4 Response to emergency situations.....              | 09        |
| 3.4.1 Leaking batteries .....                          | 09        |
| 3.4.2 Inhalation.....                                  | 09        |
| 3.4.3 Eye contact .....                                | 09        |
| 3.4.4 Skin contact.....                                | 10        |
| 3.4.5 Ingestion.....                                   | 10        |
| 3.4.6 Fire.....  | 10        |
| 3.4.7 Wet batteries.....                               | 10        |
| 3.4.8 Damaged batteries .....                          | 11        |
| 3.5 Qualified installers.....                          | 11        |
| <b>4. Appearance.....</b>                              | <b>12</b> |
| <b>5. Technical parameters.....</b>                    | <b>14</b> |
| <b>6. Connection Port .....</b>                        | <b>17</b> |
| <b>7. COM Communication Interface Definition .....</b> | <b>19</b> |
| <b>8. LED Lights Definition.....</b>                   | <b>20</b> |
| <b>9. Master &amp; Slave Setting.....</b>              | <b>21</b> |
| <b>10. PROT.....</b>                                   | <b>23</b> |
| <b>11. Installation.....</b>                           | <b>25</b> |
| 11.1 Packing Lists.....                                | 25        |
| 11.2 Installation Materials .....                      | 26        |
| 11.3 Installation Location .....                       | 26        |
| 11.4 Installation Tools Requirements .....             | 27        |
| 11.5 Wiring Specification.....                         | 28        |

## Contents

---

|  |           |
|--|-----------|
| 11.6 Battery Units Parallel Communication Connection ..... | 29        |
| 11.7 Standalone.....                                       | 30        |
| 11.8 Installation angle requirement.....                   | 31        |
| 11.9 Installation Method .....                             | 32        |
| <b>12. Trouble Shooting Guideline.....</b>                 | <b>36</b> |
| <b>13. DOD setting of inverter.....</b>                    | <b>38</b> |
| <b>14. Register on the Website after Installation.....</b> | <b>39</b> |
| <b>15. Contact us.....</b>                                 | <b>40</b> |

# 1 Introduction

---

The Soluna Lyra 5K Pack is an advanced LFP lithium battery product designed to meet the highest standards of performance and safety. Equipped with a sophisticated Battery Management System (BMS), this high-voltage battery module features CAN/RS485 communication for seamless integration and monitoring. It includes comprehensive protections against under-voltage, over-voltage, over-current, over-temperature, and under temperature, ensuring optimal performance and safety under various conditions.

With its high energy density, long lifespan, and robust reliability, the Soluna Lyra 5K Pack stands out as a green environmental product you can trust. Its innovative design not only enhances efficiency but also contributes to sustainability, making it an ideal choice for Backup Power, Micro-grid Solutions, and Small Industrial & Commercial Energy Storage Systems.













### Features

- **Excellent Safety Performance**  
Ensures the highest level of safety under various conditions.
- **Long Cycle Life**  
Designed for extended usage without significant performance degradation.
- **Support CAN/RS485**  
Allows seamless integration and communication with other systems.
- **Parallel Interconnection**  
Enables the connection of several systems in parallel for increased capacity.
- **Expandable Battery Units**  
Provides flexibility to scale the system as needed.
- **Backup Power**  
Reliable power supply during outages.
- **Micro-grid**  
Supports independent and sustainable energy systems.
- **Home Energy Storage System**  
Efficiently stores energy for residential use.

## 3 Safety Precautions

### 3.1 Warning Signs

Warning signs are essential indicators designed to alert you to conditions that could result in severe injury or significant damage to the device. They serve as critical reminders to exercise caution and take necessary precautions to prevent hazardous situations. The table below outlines the warning signs used in this manual and their meanings:

| Sign  | Description   |
|---|---|
|    | High Voltage Warning: This battery pack operates at high voltage, which can cause severe injury due to electric shock.                                |
|    | Correct Polarity: Ensure the battery polarity is correctly connected.   |
|   | Fire Safety: Keep the battery pack away from open flames or ignition sources.   |
|  | Child Safety: Store the battery pack out of reach of children.  |
|  | Installation Manual: Thoroughly read the manual before installing and operating the battery pack.   |
|  | Heavy Weight Warning: The battery pack is heavy, and improper handling may result in severe injury. Utilize proper lifting techniques.                |
|  | Electrolyte Leakage: The battery pack may leak corrosive electrolyte. Handle with care and adhere to appropriate safety procedures.                   |
|  | Explosion Risk: The battery pack may explode under certain conditions.  |
|  | Disposal Instructions: Do not dispose of the battery pack with household waste at the end of its working life. Follow local regulations for disposal. |
|  | Compliance Requirement: Failure to follow the provided requirements and guidelines may lead to physical injury or damage to the device.               |
|  | Do not short circuit it.  |
|  | Grounding conductor<br>This symbol indicates the position for connecting a grounding conductor.   |

## 3.2 Safety Instructions

For safety reasons, it is crucial that installers thoroughly familiarize themselves with the contents of this manual and all associated warnings prior to commencing the installation.



### General Safety Precautions

Failure to adhere to the precautions outlined in this section can result in serious injury or property damage. Please observe the following safety guidelines:

---

### 3.2.1 Risks of Explosion

- Avoid subjecting the battery pack to strong impacts.
- Do not crush or puncture the battery pack.
- Never dispose of the battery pack in a fire.

### 3.2.2 Risks of Fire

- Do not expose the battery pack to temperatures exceeding 60°C.
- Keep the battery pack away from heat sources, such as fireplaces.
- Avoid exposing the battery pack to direct sunlight.
- Ensure the battery connectors do not come into contact with conductive objects like wires.

### 3.2.3 Risks of Electric Shock

- Refrain from disassembling the battery pack.
- Do not touch the battery pack with wet hands.
- Keep the battery pack away from moisture or liquids
- Ensure the battery pack is kept away from children and animals.

### 3.2.4 Risks of Damage to the Battery Pack

- Prevent the battery pack from coming into contact with any liquids.

### **3.3 Battery Handling Guide**

- Use the battery pack strictly as directed in the manual.
- Do not use the battery pack if it appears defective, cracked, broken, or fails to operate correctly.
- Do not attempt to open, disassemble, repair, tamper with, or modify the battery pack as it is not user serviceable.
- Handle the battery pack with care during transportation to avoid damage.
- Avoid impacting, pulling, dragging, or stepping on the battery pack.

### **3.4 Response to Emergency Situations**

The Soluna Lyra 5K Pack consists of multiple batteries designed to prevent hazards resulting from failures. However, Soluna cannot guarantee absolute safety. Please familiarize yourself with the following emergency procedure

#### **3.4.1 Leaking Batteries**

If the battery pack leaks electrolyte, avoid contact with the leaking liquid or gas. Electrolyte is corrosive and contact may cause skin irritation and chemical burns. If exposed to the leaked substance, follow these steps:

#### **3.4.2 Inhalation**

- Evacuate the contaminated area immediately.
- Seek medical attention without delay

#### **3.4.3 Eye Contact**

- Rinse eyes with flowing water for at least 15 minutes.
- Seek medical attention immediately.

#### **3.4.4 Skin Contact**

- Wash the affected area thoroughly with soap and water.
- Seek medical attention immediately.

### 3.4.5 Ingestion

- Induce vomiting.
- Seek medical attention immediately.

### 3.4.6 Fire Response Procedures

In the event of a fire, always have an ABC or carbon dioxide extinguisher on hand.

---



The battery pack may ignite if heated above 150 °C. If a fire occurs where the battery pack is installed, follow these steps:

---

- **Extinguish Early**

Attempt to extinguish the fire before the battery pack ignites.

- **Safe Relocation**

If extinguishing is not possible but time allows, move the battery pack to a safe area before it catches fire.

- **Evacuate**

If the battery pack has already caught fire, do not attempt to extinguish it. Evacuate the area immediately.

---



Caution: If the battery catches fire, it will emit noxious and poisonous gases. Do not approach the fire.

---

### 3.4.7 Wet Batteries

If the battery pack becomes wet or submerged in water, do not attempt to access it. Contact Soluna or your distributor for technical assistance immediately.

### 3.4.8 Damaged Batteries

Damaged batteries are hazardous and must be handled with extreme caution. They are unfit for use and may pose a danger to people or property.

If the battery pack appears damaged, pack it in its original container and return it to Soluna or your distributor.



**Leakage and Flammability:** Damaged batteries may leak electrolyte or produce flammable gas. If you suspect such damage, contact Soluna for advice and information immediately.

---

### 3.5 Qualified Installers

This manual, along with the tasks and procedures described herein, is intended for use by skilled professionals only. A skilled professional is defined as a trained and qualified electrician or installer who possesses all of the following skills and experience:

- **Functional Knowledge**

Understanding of the principles and operation of on-grid systems.

- **Risk Awareness**

Awareness of the dangers and risks associated with installing and using electrical devices and the acceptable methods for mitigating these risks.

- **Installation Proficiency**

Expertise in the installation of electrical devices.

- **Adherence to Guidelines**

Knowledge of and compliance with this manual, including all safety precautions and best practices.

- **Battery Maintenance**

Only authorized personnel should perform maintenance. Turn off the battery before maintenance. Periodically check voltage, SOC, and cables for damage or wear. Perform balancing maintenance (fully charge) every three months.

- **Installation Environment Requirements**

Avoid flammable, explosive, or corrosive materials. Keep out of children's reach and avoid high temperatures. Ensure proper ventilation and avoid electromagnetic interference. Install in a sheltered, well-ventilated area, within the appropriate temperature and humidity range, and below 2000 meters altitude.

## 4 Appearance

---



|        |     |    |
|--------|-----|----|
| Width  | 420 | mm |
| Depth  | 160 | mm |
| Height | 595 | mm |
| Weight | 47  | kg |

## 4 Appearance



| Number | Name                  | Description   |
|--------|-----------------------|---|
| 1      | Logo                  | The brand's emblem or identifier.                         |
| 2      | Entry                 | The main access point or interface for the product.       |
| 3      | Install Wi-Fi bracket | Wi-Fi bracket for stable device installation.             |
| 4      | ON / OFF              | The switching between two states: power on and power off. |

## 5 Technical parameters

| Physical Characteristics                       |             |
|--|-------------|
| Width  | 420 mm      |
| Depth  | 160 mm      |
| Height   | 595 mm      |
| Weight   | 47 kg       |
| Electrical Characteristics                     |             |
| Battery type                                   | LFP         |
| Total Energy Capacity                          | 5.12kWh     |
| Usable Energy Capacity                         | 4.60kWh     |
| Battery Capacity (Nominal)                     | 100Ah       |
| Nominal Voltage                                | 51.2V       |
| Usable Voltage Range                           | 48-57.6V    |
| Charge Current (Recommended)                   | 75A         |
| Discharge Current (Recommended)                | 100A        |
| Max. Continuous Charge Current                 | 75A         |
| Max. Continuous Discharge Current              | 100A        |
| Recommended Depth of Discharge                 | 80%         |
| Max. Depth of Discharge                        | 90%         |
| Cycle life @25 (Standard charge and discharge) | ≥6000 ①     |
| Internal resistance                            | ≤40mΩ       |
| DC Disconnect                                  | MOS Breaker |
| Warranty                                       |             |

## 5 Technical parameters

|  |  |
|--|--|
| 7 years                                |  |
| <b>BMS</b>                             |  |
| Power consumption                      | <3W (work), <100mW (sleep)   |
| Monitoring parameters                  | System Voltage<br>System Current<br>Cell Voltage<br>Cell Temperature               |
| Communication                          | CAN / RS485  |
| Protection                             | Over Voltage, Under Voltage<br>Over Current, Over Temperature<br>Under Temperature |
| <b>System Configuration</b>            |  |
| Module parallel                        | 1~16 Parallel  |
| <b>Operating Conditions</b>            |  |
| Installation Location                  | Indoor   |
| Operating Temperature                  | -10~50 °C  |
| Operating Temperature (Recommended)    | 15~30 °C   |
| Storage Temperature                    | -20~60 °C  |
| Humidity                               | 5%~95%   |
| Altitude                               | Max. 2,000 m   |
| Cooling Strategy                       | Natural Convection   |
| <b>Reliability &amp; Certification</b> |  |
| Certificates                           | /  |
| Transportation                         | UN38.3   |
| Ingress Rating                         | IP20   |

## 5 Technical parameters

---

1: Note: At  $25\pm 2^{\circ}\text{C}$  of cell under 0.5C/0.5C test condition and 70% End of Life (EOL).

### NOTE


- When a level 1 alarm is triggered, the charge or discharge rate will be reduced.
- When a level 2 alarm is triggered, charge and discharge operations will be limited to 0A.
- Prolonged discharging at currents below 1A may lead to inaccuracies in the State of Charge(SOC) calculation.
- Storage SOC: Maintain a State of charge (SOC) between 30% and 50% for storage, and cycle the charge-discharge process every 6 months.
- Store the battery at a temperature range of  $15\sim 30^{\circ}\text{C}$ , for periods not exceeding one year.

## 6 Connection Port

Once the cover plate of the Soluna Lyra 5K Pack is opened, users can view the connection ports of the battery. Please refer to the images below for detailed visuals.

**Remark:**


|   |                                     |
|---|-------------------------------------|
| 1 | Screw torque standard: 0.24-0.36N*m |
| 2 | Screw torque standard: 4.40-5.20N*m |

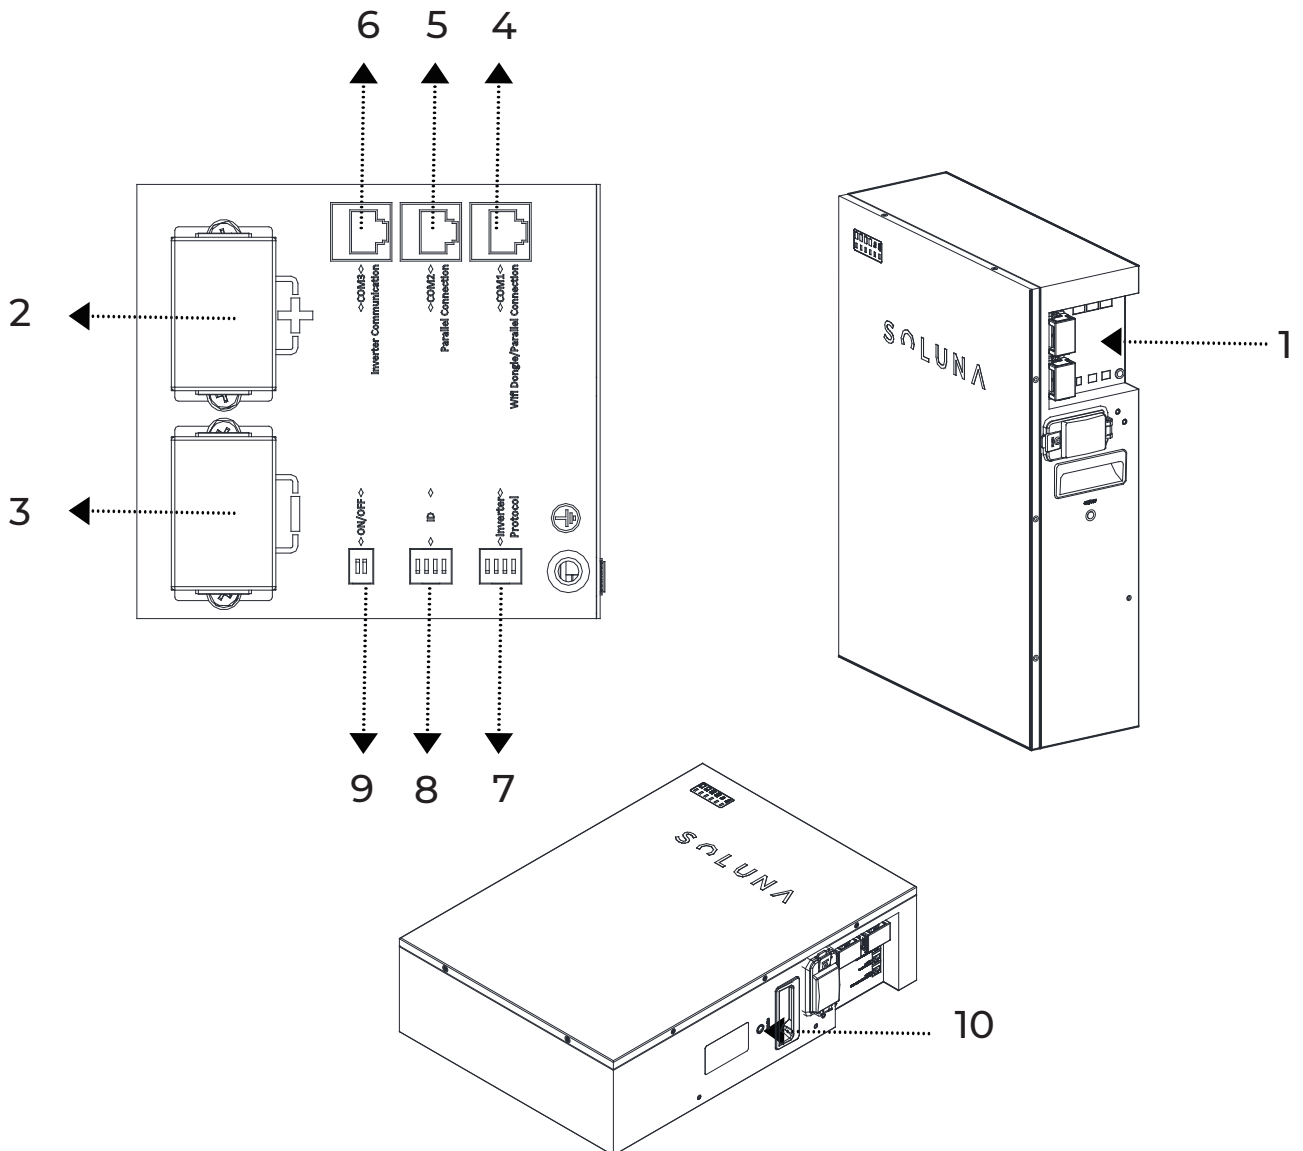

| Number | Name        | Describe   |
|--------|-------------|--|
| 1      | upper cover | /  |
| 2      | Battery+    | Battery Positive (Battery+): Connects to the positive terminal of the battery. Terminal rated current: 1 00A |
| 3      | Battery-    | Battery Negative (Battery-): Connects to the negative terminal of the battery. Terminal rated current: 100A  |
| 4      | COM 1       | Communication Port 1 (COM 1): Wifi Dongle/Parallel Connection  |
| 5      | COM 2       | Communication Port 2 (COM 2): Parallel Connection  |
| 6      | COM 3       | Communication Port 3 (COM 3): Inverter Communication   |
| 7      | PROT        | Protocol Port (PROT): Select the protocol with the inverter and shake hands with the inverter                |
| 8      | ID          | Identification Port (ID): Used to identify battery module address  |
| 9      | DIP         | Please refer to pages 29 and 30  |
| 10     | Switch      | /  |

# 7 COM Communication Interface Definition

Once the cover plate of the Soluna Lyra 5K Pack is opened, users can view the connection ports of the battery. Please refer to the images below for detailed visuals.

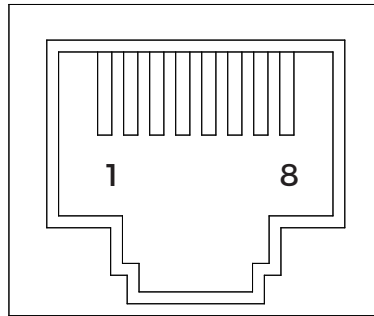

## COM1

| 1              | 2              | 3   | 4     | 5     | 6   | 7       | 8       |
|----------------|----------------|-----|-------|-------|-----|---------|---------|
| RS-485A (WIFI) | RS-485B (WIFI) | 12V | CAN-H | CAN-L | GND | RS-485A | RS-485B |

## COM2


| 1              | 2              | 3   | 4     | 5     | 6   | 7       | 8       |
|----------------|----------------|-----|-------|-------|-----|---------|---------|
| RS-485A (WIFI) | RS-485B (WIFI) | 12V | CAN-H | CAN-L | GND | RS-485A | RS-485B |

## COM3

| 1  | 2  | 3  | 4     | 5     | 6  | 7       | 8       |
|----|----|----|-------|-------|----|---------|---------|
| NC | NC | NC | CAN-H | CAN-L | NC | RS-485A | RS-485B |

- 1) COM 1 Wifi Dongle/Parallel Connection
- 2) COM 2 Parallel Connection
- 3) COM 3 Inverter Communication


## 8 LED Lights Definition

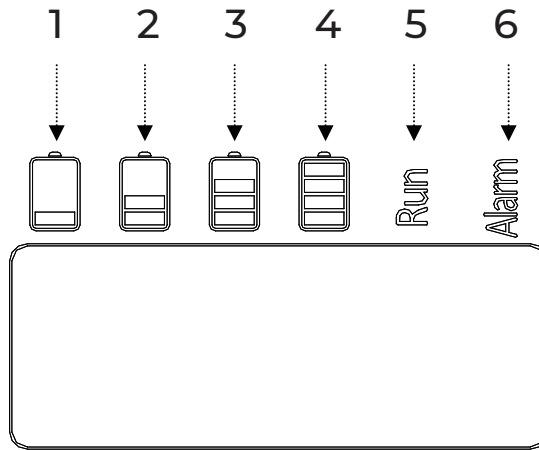





| Number | Name                    | Describe     |
|--------|-------------------------|--------------|
| 1      | 25% capacity indicator  | Green light  |
| 2      | 50% capacity indicator  | Green light  |
| 3      | 75% capacity indicator  | Green light  |
| 4      | 100% capacity indicator | Green light  |
| 5      | Run indicator light     | Green light  |
| 6      | Alarm indicator light   | Yellow light |

## 9 Master & Slave Setting






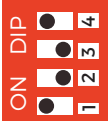
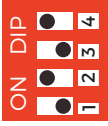
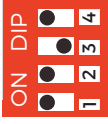
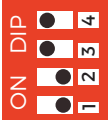
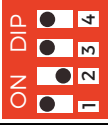
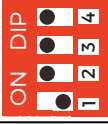
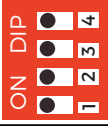
First, locate the ID on the operation panel. When the battery packs are connected in parallel, the address of each battery module can be set using the dial switch. Each address is unique and independent

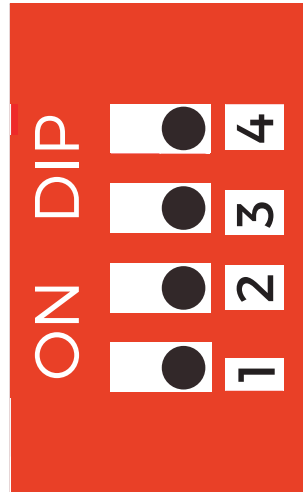


ID
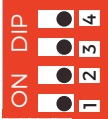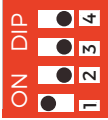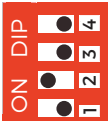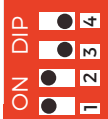
| Address | Location of Dial Switch  |                              |
|---------|--|------------------------------|
| 0       |  0000 | One battery module ( Master) |
| 1       |  0001 | Set as Pack 1                |
| 2       |  0010 | Set as Pack 2                |
| 3       |  0011 | Set as Pack 3                |

## 9 Master & Slave Setting

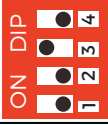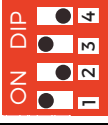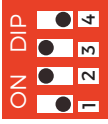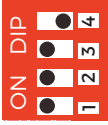
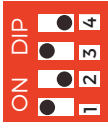
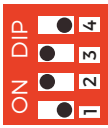
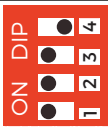
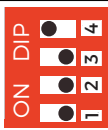
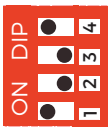
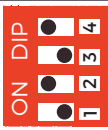
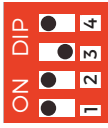
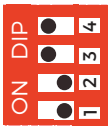
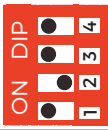
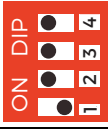

|    |   |      |                |
|----|---|------|----------------|
| 4  |    | 0100 | Set as Pack 4  |
| 5  |    | 0101 | Set as Pack 5  |
| 6  |    | 0110 | Set as Pack 6  |
| 7  |    | 0111 | Set as Pack 7  |
| 8  |   | 1000 | Set as Pack 8  |
| 9  |  | 1001 | Set as Pack 9  |
| 10 |  | 1010 | Set as Pack 10 |
| 11 |  | 1011 | Set as Pack 11 |
| 12 |  | 1100 | Set as Pack 12 |
| 13 |  | 1101 | Set as Pack 13 |
| 14 |  | 1110 | Set as Pack 14 |
| 15 |  | 1111 | Set as Pack 15 |

First, locate the PROT port on the operation panel. When the inverter is selected, the communication protocol can be set using the rotary switch. Each address operates independently, ensuring precise communication and system integrity.

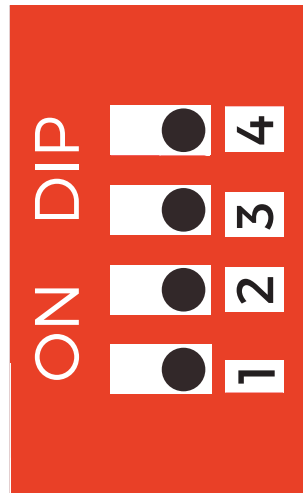











## PROT

| Address | Location of Dial Switch |  |
|---------|-------------------------|--|
| 0       |                         | 0000<br>Soluna Energy_ Default (solarmax. Solis.Goodwe.Solax.SAJ.Sinexcel) |
| 1       |                         | 0001<br>Soluna (Deye.Afore.Hoymiles.APstorage. Anicsun IP65.Hypontech)     |
| 2       |                         | 0010<br>SMA  |
| 3       |                         | 0011<br>Voltronic.Anicsun IP21   |

|    |   |      |                       |
|----|---|------|-----------------------|
| 4  |    | 0100 | Must                  |
| 5  |    | 0101 | Phocos Any-Grid       |
| 6  |    | 0110 | Victron               |
| 7  |    | 0111 | Growatt               |
| 8  |   | 1000 | Luxpower              |
| 9  |  | 1001 | Megarevo              |
| 10 |  | 1010 | Aiswei                |
| 11 |  | 1011 | /                     |
| 12 |  | 1100 | /                     |
| 13 |  | 1101 | /                     |
| 14 |  | 1110 | /                     |
| 15 |  | 1111 | No communication mode |
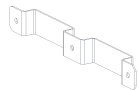
## 11.1 Packing Lists

Here is the list of items included in the package, along with their quantities. If any item is damaged or missing, please contact Soluna or your distributor:

| Item | Name                       | Describe   | Qty (pcs) | Photo   |
|------|----------------------------|--|-----------|---|
| 1    | Soluna Lyra 5K Pack        | The main LiFePO <sub>4</sub> lithium battery unit.                               | 1         |    |
| 2    | Expansion Bolt M6*60       | Used for securely fastening equipment or brackets to concrete or brick surfaces. | 4         |    |
| 3    | Screws-M5*10               | Used for fastening components with precise and secure connections.               | 7         |   |
| 4    | Communication Cable        | Used for data transmission and system connection between devices.                | 3         |  |
| 5    | Wall Mount Bracket 01      | Used for securely mounting the device onto a wall surface                        | 1         |  |
| 6    | Wall Mount Bracket 02      | Designed for securely installing the device on a wall with enhanced stability.   | 1         |  |
| 7    | Wall Mount Backplate       | Used as a stable base for securely attaching the device to a wall.               | 1         |  |
| 8    | WiFi bracket               | Used for supporting and securely mounting components or devices in the system    | 1         |  |
| 9    | Power cable B+/B-          | /  | 1/1       |  |
| 10   | WiFi Data Collection Stick | /  | 1         |  |

## 11.2 Installation Materials

**These installation materials shall be prepared by installers.**

- Charging cables
- Communication cable.

## 11.3 Installation Location

**If that isn't feasible, please ensure the installation location meets the following conditions:**

- The building is designed to withstand earthquakes.
- The location is far away from the sea to avoid exposure to saltwater and humidity.
- The floor is flat and level.
- There are no flammable or explosive materials nearby.
- The ambient temperature is between 15 and 30°C.
- The temperature and humidity remain constant.
- There is minimal dust and dirt in the area.
- There are no corrosive gases present, including ammonia and acid vapor.
- The battery system should not be placed in direct sunlight; it is suggested to build sunshade equipment.
- In cold areas, a heating system is required.



If the ambient temperature falls outside the optimal range, the battery pack will automatically stop operating to protect itself. The best temperature range for the battery pack to function is between 15 °C and 30 °C. Frequent exposure to extreme temperatures can degrade the performance and shorten the lifespan of the battery pack.

---

## 11.4 Installation Tools Requirements



The following tools are required to install the battery pack:

**Remark:**

Use properly insulated tools to prevent accidental electric shock or short circuits.

| Item | Photo   | Name                       |
|------|---|----------------------------|
| 1    |    | Phillips-screwdriver bit   |
| 2    |    | Wire cutters               |
| 3    |    | Wire stripper              |
| 4    |  | Tape measure               |
| 5    |  | Pistol drill               |
| 6    |  | Spirit level               |
| 7    |  | Electrical insulating tape |
| 8    |  | Multimeter                 |
| 9    |  | Marker pen                 |

**When handling the battery pack, it is essential to wear the appropriate safety gear to protect against potential hazards, installers must adhere to the relevant requirements of international standards, such as IEC 60364, or comply with domestic legislation.**

|   |   |                  |
|---|---|------------------|
| 1 |  | Safety goggles   |
| 2 |  | Safety shoes     |
| 3 |  | Insulated gloves |


## 11.5 Wiring Specification

**To standardize the wiring specifications for the Soluna Lyra 5K Pack, the following requirements must be met for connecting wires:**

| Battery Wire  | Communication Cable  |
|---|--|
| It is recommended to use 20 mm <sup>2</sup> (4AWG) of conductor with double insulation. | It is recommended to use Standard communication cable with shielding function. |

## 11.6 Battery Units Parallel Communication Connection

To standardize the wiring specifications for the Soluna Lyra 5K Pack, the following requirements must be met for connecting wires:

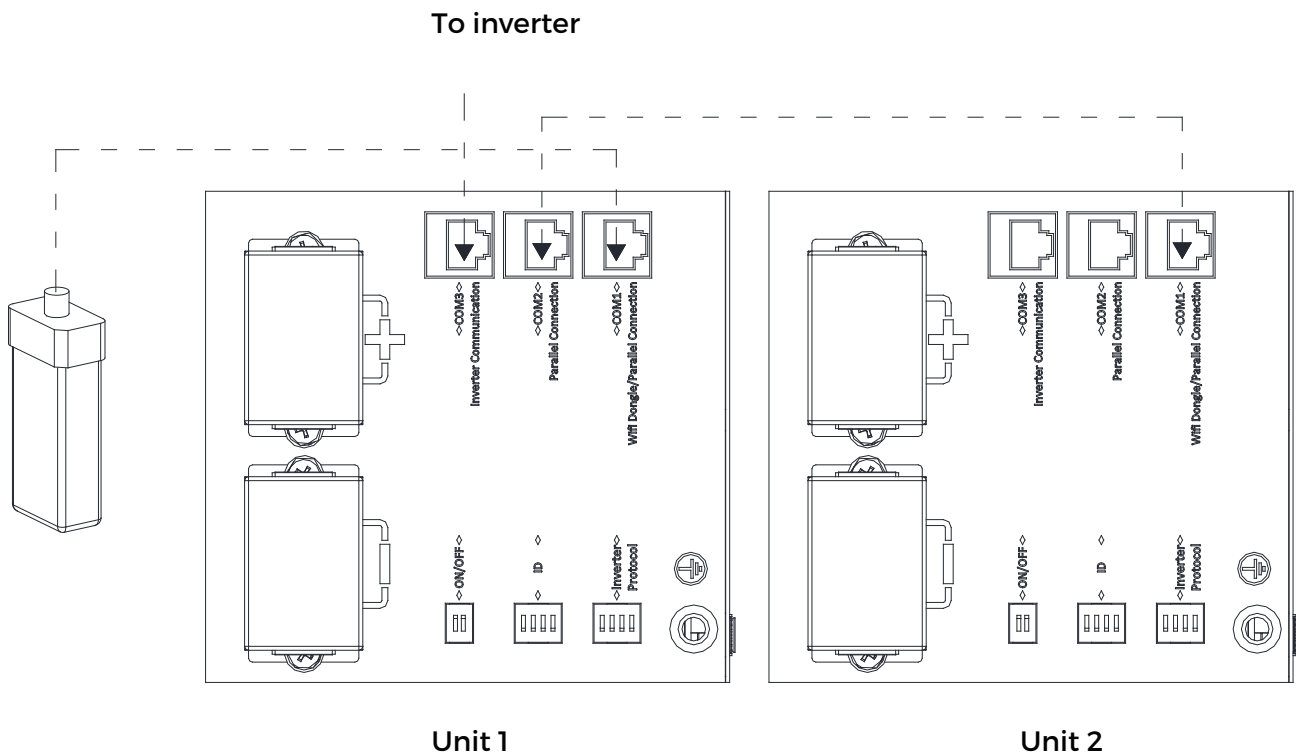


**Remark:**

- 1) COM 1 Wifi Dongle/Parallel Connection
- 2) COM 2 Parallel Connection
- 3) COM 3 Inverter Communication
- 4) Please find the above drawings for details.


## 11.7 Standalone

Please select the protocol on the inverter first. Be sure to choose the correct protocol based on the inverter model and its manual.

Diagram: Please refer to the following diagram for detailed visual instructions.

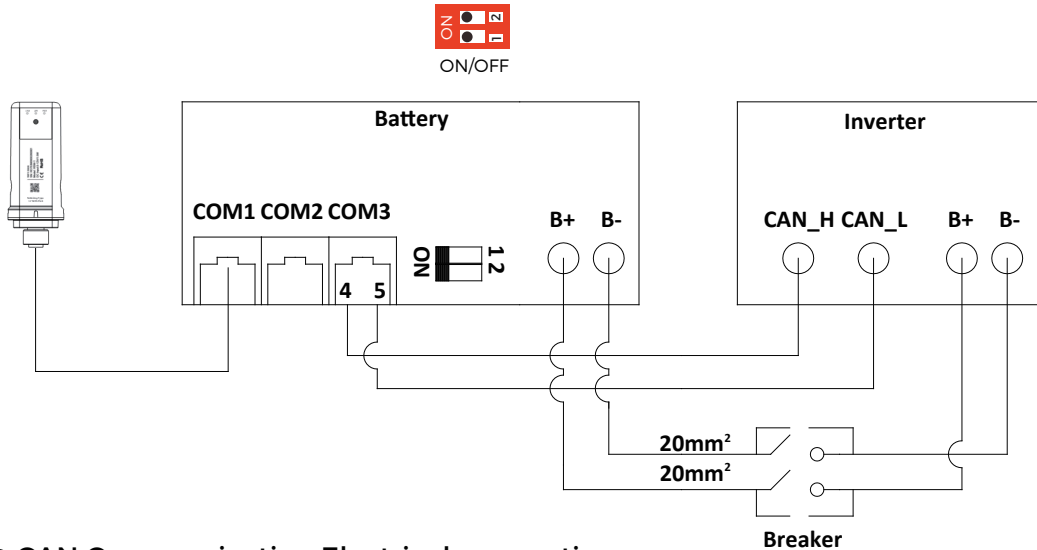

### ● CAN Communication Electrical connection

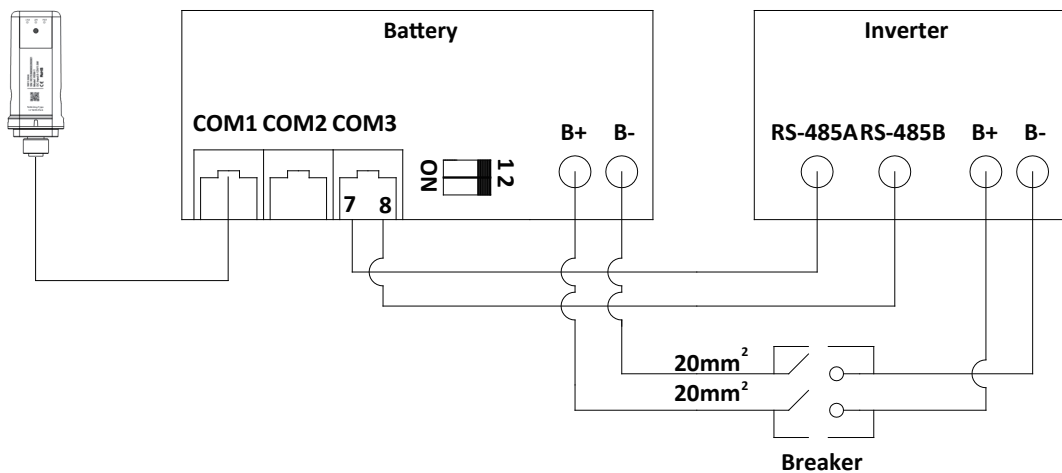

### ● RS485 Communication Electrical connection


#### Remark:

During CAN communication


- When using the CAN interface to communicate with the inverter, either or both of the Dip Resistance 1 & 2 should be in the "ON" position.
- After the battery is connected to the inverter, close the Breaker first, and then turn on the battery.

## 11.8 Multiple Clusters

**Diagram:** Please refer to the following diagram for detailed visual instructions.

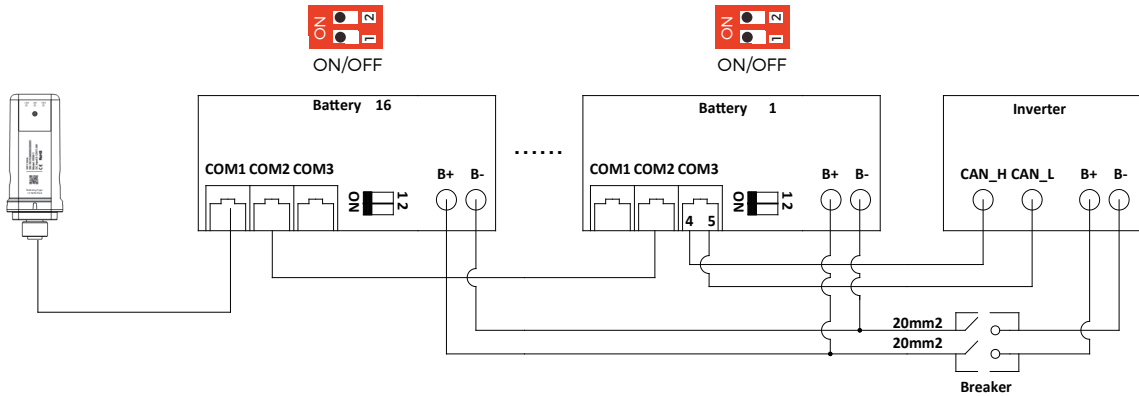

### ● CAN Communication Electrical connection

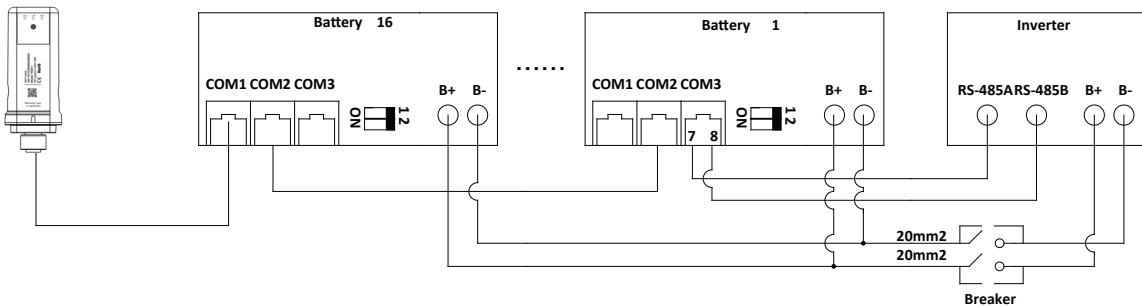

### ● RS485 Communication Electrical connection

#### Remark:


During CAN communication

- Dial the code only for the first battery and the last battery, either or both of the Dip Resistance 1 & 2 should be in the "ON" position.
- **After the battery is connected to the inverter, close the Breaker first, and then turn on the battery.**

## 11.9 Installation Method

### Wall Mounting

- Place the wall mount backplate at the desired installation position. After leveling it, mark the corresponding drilling points and use a hammer drill to drill holes at the marked locations with a diameter of 10mm and a depth of 60-65mm.
- Fix the wall mount backplate to the wall using 4 expansion bolts (torque: 6.0-7.5 N·m).
- Secure Wall Mount Bracket 01 to the back of the product using 3 M5 screws (torque: 3.7-4.5 N·m).
- Place the product onto the wall mount backplate from top to bottom.
- Secure Wall Mount Bracket 02 to the product using 2 M5 screws (torque: 3.7-4.5 N·m).

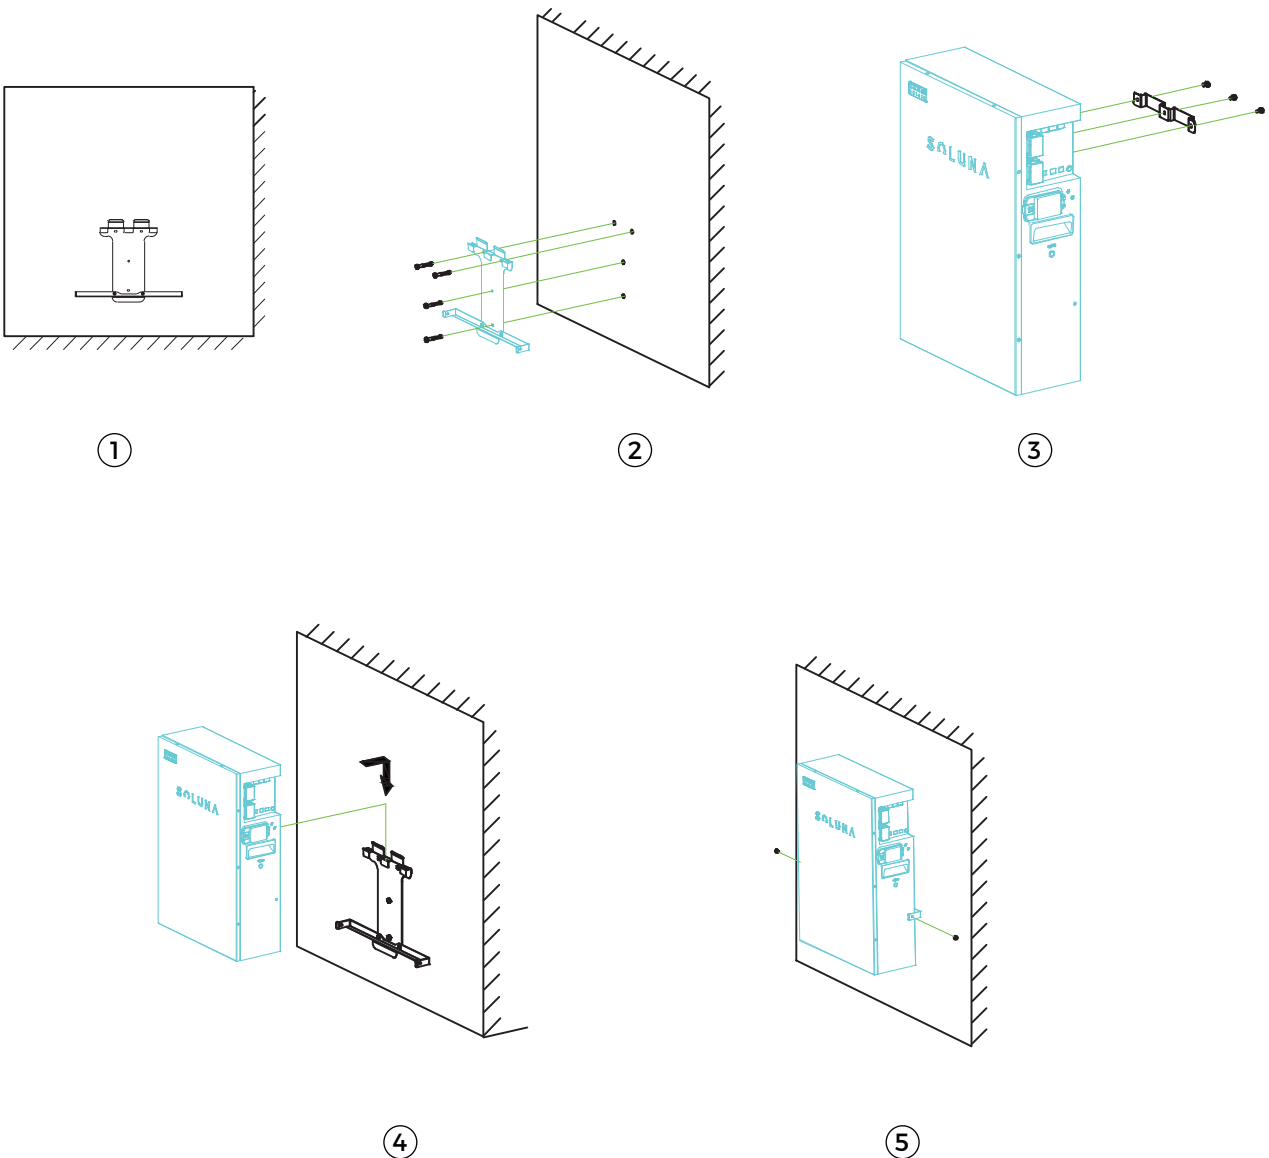

## 11.9 Installation Method


To start the Soluna Lyra 5K Pack, follow these steps:

- **Press the ON/OFF Button**

The Soluna Lyra 5K Pack will start operating within 15 seconds.

- **Note on Communication**

The Soluna Lyra 5K Pack will cease output if there is no communication between the battery and the inverter within 10 minutes.

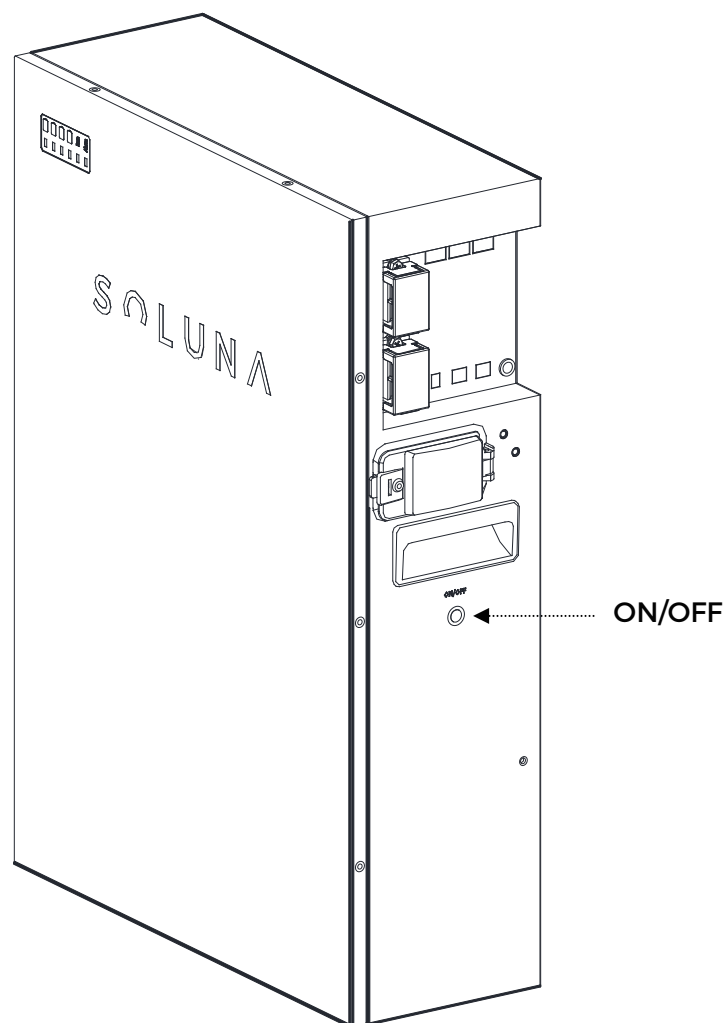

# 12 Trouble Shooting Guideline

## 12.1 Battery parameter settings on the inverter

|                            |                 |
|----------------------------|-----------------|
| Max Charging(Bulk) Voltage | 55.6V           |
| Absorption Voltage         | 55.2V           |
| Float Voltage              | 54.4V           |
| Shut Down(cut off) Voltage | 49.4V           |
| Shut Down(cut off) SOC     | 25%             |
| Max Charge Current         | 50A*battery QTY |
| Max Discharge Current      | 50A*battery QTY |

## 12 Trouble Shooting Guideline

Please find the following table for details

| Phenomenon   | LED Alarm                       | Cause  | Solution   |
|--|---------------------------------|--|--|
| System not working properly  | Flashes 1 time every 5 seconds  | Battery ID address is duplicated                                     | Check whether the battery ID has duplicate addresses. After modification, please shut down and restart all batteries with duplicate addresses  |
| The system shuts down after running for about 10 minutes   | Flashes twice every 5 seconds   | Master battery protocol and inverter protocol are not compatible     | Check the master battery protocol address, please restart the master after modification  |
| System not working properly  | Flashes 3 times every 5 seconds | Hardware Fault   | Immediately turn off the battery and contact after-sales personnel   |
| When the number of batteries is more than 2, the battery will stop charging and discharging intermittently | Flashes 4 times every 5 seconds | The voltage difference between the batteries is more than 1.5V       | The battery is charged and discharged normally. When the voltage difference between the batteries is less than 1.5V, Once the wiring connections are correctly made, the battery pack will automatically be paralleled successfully. At the moment of paralleling, the battery will stop charging and discharging intermittently and then resume work. This is a normal phenomenon |
| The system shuts down after running for about 10 minutes   | Flashes 5 times every 5 seconds | The communication between the master and the inverter is interrupted | 1. Check whether the protocol dial position of the master battery corresponds to the inverter protocol<br>2. Check whether the communication cable between the master battery and the inverter is correct. Ensure that the communication interface is plugged in correctly and inserted firmly.  |

## 12 Trouble Shooting Guideline

|  |   |  |  |
|--|---|--|--|
| The master is running normally, and the battery of the slave is turned off | Flashes 6 times every 5 seconds               | No communication between master and slave  | Check whether the communication cable between the master battery and the inverter is correct. Ensure that the communication interface is plugged in correctly and inserted firmly.   |
| System not working properly  | Flashes 7 times every 5 seconds               | There is a problem with the charging MOSFET  | Stop all charging and discharging activities, turn off the battery, and contact after-sales personnel immediately. Do not touch the positive and negative poles of the battery, and ensure that only qualified professionals handle the final steps.   |
| System not working properly  | Flashes 8 times every 5 seconds               | There is a problem with the discharging MOSFET   | Stop all charging and discharging activities, turn off the battery, and contact after-sales personnel immediately. Do not touch the positive and negative poles of the battery, and ensure that only qualified professionals handle the final steps.   |
| The battery cannot be charged or discharged                                | Flashes 9 times every 5 seconds               | The battery temperature detection harness is damaged   | Please contact the after sales personnel and let the after sales personnel handle it   |
| System not working properly  | Alarm LED always on and SOC is lower than 25% | The battery triggers the mandatory protection state  | <ol style="list-style-type: none"> <li>1. Power off and restart the battery for charging</li> <li>2. Contact the after sales personnel</li> </ol>  |
| No output after battery power on   |   | <ol style="list-style-type: none"> <li>1.The master address is wrong</li> <li>2.MOSFET open</li> <li>3.FUSE burnt</li> </ol> | Check if the master address is set to 0. Verify the positive and negative wiring of the battery for correctness. Inspect the monitoring software for any protection alerts. Measure the voltage of the positive and negative poles of the battery. If the voltage is lower than 44.8V, contact the after-sales personnel for assistance. |
| The battery cannot be charged or discharged                                | LED always on                                 | Trigger over temperature/under temperature/temperature difference/alarm and protection                                       | Please contact after sales personnel   |

## **12 Trouble Shooting Guideline**

---

### **Notice**

### **Damage to the Battery System Due to Under Voltages**

- **Timely Charging**

Charge the over-discharged system within seven days when the temperature is above 25°C.  
Charge the over-discharged system within fifteen days when the temperature is below 25°C.

- **Contact for Assistance**

If the battery system doesn't start up, please contact Soluna local after-sales service within 48 hours. Otherwise, the battery could be permanently damaged.

# 13 Depth of Discharge (DoD) setting of inverter

To make sure the battery working smoothly, we recommend the DOD setting of inverter as follows.

**On-Grid DOD:90%**

**Off-Grid DOD:70%**

**Power dispatching mode DoD:70%**

In energy storage systems, reducing the depth of discharge (DOD) of lithium batteries is aimed at **\*\*improving system economics, extending battery life, enhancing safety, and optimizing performance\*\***. Below are the specific reasons:

## **1. Extending Battery Life**

- The cycle life of lithium batteries is closely related to the depth of discharge. Deep discharge (e.g., 80%-100% DOD) accelerates battery aging, leading to faster capacity degradation.
- Reducing DOD (e.g., controlling it between 20%-80%) can significantly extend the battery's cycle life, thereby lowering long-term maintenance and replacement costs for the energy storage system.

## **2. Improving System Economics**

- Batteries account for a significant portion of the cost in energy storage systems. Extending battery life means reducing the frequency of battery replacements and lowering the total lifecycle cost.
- Although reducing DOD decreases the available energy per cycle, the overall energy throughput (total charge-discharge capacity) may increase by extending battery life, thereby improving economic efficiency.

## **3. Enhancing Safety**

- Deep discharge increases the risk of over-discharge, causing the battery voltage to drop too low, which may lead to irreversible chemical damage (e.g., dissolution of the copper current collector in the anode).
- Reducing DOD can prevent over-discharge, minimize safety risks such as thermal runaway, and ensure stable operation of the energy storage system.

## 14 Register on the Website after Installation

---

After completing the installation of the battery system and confirming that it is operating normally, please log in to the Soluna official website to register your product installation and usage details. This registration is required for the product warranty to take effect. Follow the on-screen instructions on the website to complete the registration process.

<https://soluna.co> → SUPPORT & SERVICE → Warranty registration

## 15 Contact us

---

If you have any questions, feedback, or need assistance, please feel free to reach out to us. We are here to help!

Soluna (Shanghai) Co.,Ltd

Add: No.3492 Jinqian Road, Shanghai, China 201406

Tel: +86-21-57475835

Email: [sales@solunabattery.com](mailto:sales@solunabattery.com)

Web: [www.solunabattery.com](http://www.solunabattery.com)

Social media: <https://www.linkedin.com/company/solunabattery>